




PARO 475 RX



Installation av räcken - Kaiteiden asennus

Skruvar 4,8 x 25 OBS ! Använd 3,8mm borr !!

Ruuvit 4,8 x 25 HUOM ! Käytä 3,8mm poraa !!

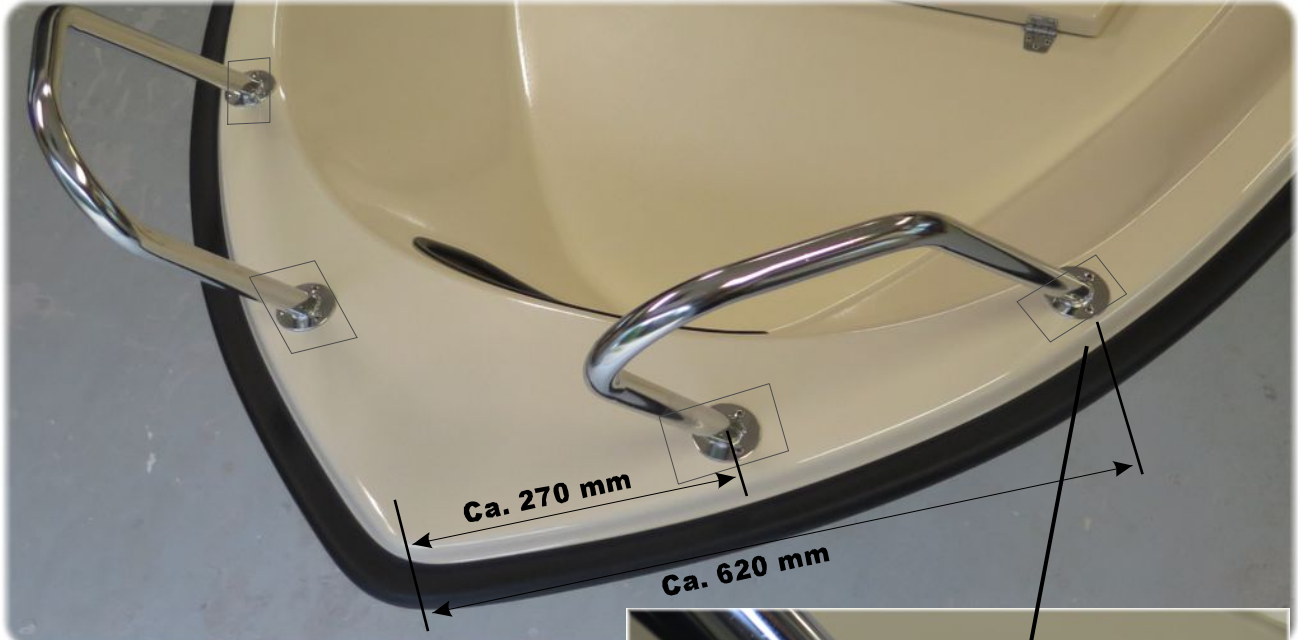


Sänk borrhålen en aning för att undvika sprickor i gelcoatens!
Upota porausreiät hieman välttäkkesi hiusmurtumia gelcoatissa !

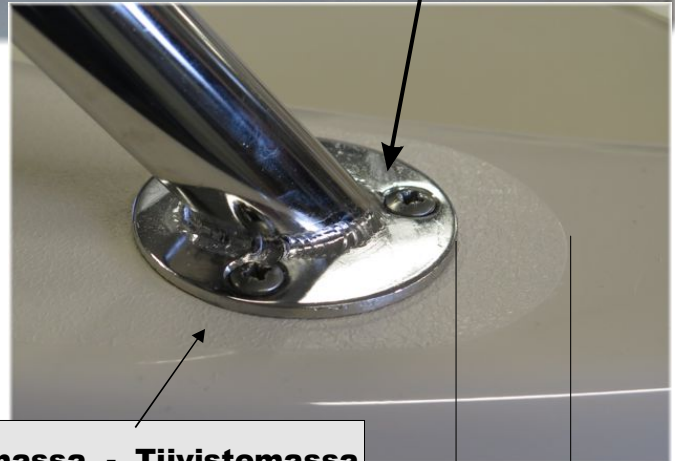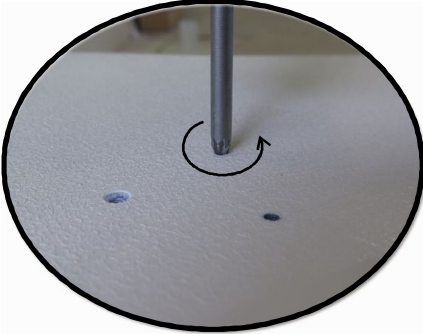

**Tätningssmassa - Tiivistemassa
FixAll High Tack**

25 mm

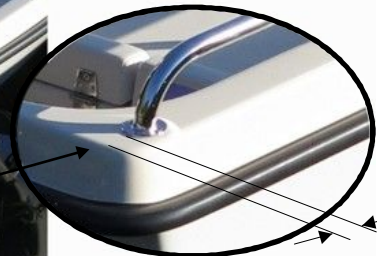

30 - 35 mm